

## RESYS P40

### INSTALLATION

Installation must only be carried out by qualified personnel.

Before installation, disconnect from the power supply. Connect the device as shown on the diagram below (N.B. some optional functions do not need to be cabled). When installing the device, make the connections between the relay and the differential toroid as short as possible.

Do not put relay cables or the differential toroid beside power conductors.

Do not place differential toroids close to sources of intense magnetic fields.

#### > Note

This differential relay conforms to type A which trips sinusoidal alternating currents and pulsed currents, whether they are applied suddenly or change slowly. This product is also immune to interference.

This relay must be installed in accordance with the regulations currently in force.

The device must be checked periodically to see that it complies with the regulations.


#### > Test Function

Bargraph blinks		
"Trip" LED and "Alarm" relay activated		
<b>&gt; Continuous monitoring</b>		
Test OK	NO	NO
Toroid input short circuit	NO	NO
Relay/Toroid connection break	YES	NO
<b>&gt; Activation of "Test" button (Press (&gt;1s) or external button)</b>		
Test OK	YES	YES
Toroid input short circuit	NO	NO
Relay/Toroid connection break	YES	NO

#### > Pre-alarm function

When the measured current exceeds 50% of the threshold value, the pre-alarm relay changes state (if selected in this mode). Automatic reset to its original state if 30% lower than pre-set threshold.

#### > Description of front panel

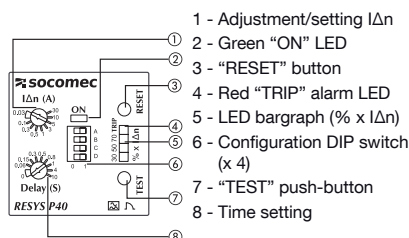

• With  $I_{\Delta n}$  set at 30 mA, the timing is set at 0 (instantaneous) and can not be modified.

• The pre-configured factory setting for the device is 30 mA/0s. These values can be modified as needed for operation. A plastic seal is provided with the device in order to lock the protective cover and ensure the settings.

## Operating instructions

### Earth leakage relay

### A and AC types


#### > Configuration (DIP switch)

Switch		Relay configuration	
A	B	AL1	AL2
0	0	Positive security	Positive security
1	0	Negative security	Pre-alarm (neg. security)
0	1	Negative security*	Positive security*
1	1	Negative security	Pre-alarm (pos. security)
C		Storage mode	
1		Automatic reset	
0		Storage mode*	
D		Toroidal transformer ratio	
1		600 : 1 > Socomec* toroid	
0		1000 : 1 > other manufacturers	

\* factory configuration

• (negative security: relay excited in case of alarm/positive security: relay not excited in case of alarm).

#### TERMINAL CONNECTION DIAGRAM

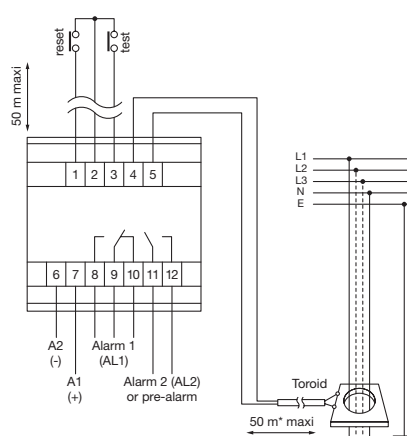

The output relays are shown in the non-excited state (for example, as if the auxiliary supply was not present)


The protective earth wire must not pass through the toroid. For single-phase applications, only the phase and the neutral must pass through the toroid.

\* Cabling: For distances > 1 m, use a twisted pair for connection between the relay and the toroid.

#### > Troubleshooting

If the product is not working properly, check that it is properly connected.

#### DIMENSIONS

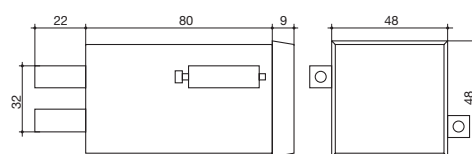

#### TECHNICAL SPECIFICATION

- **Us Supply (6, 7):**  
12 - 125 VDC (85 - 110 % de Us)  
115, 230 VAC (85 - 115 % de Us) (see terminal connection diagram). All AC supplies are galvanically isolated from toroid, TEST and RESET inputs.
- **Frequency:** 50 / 60 Hz (AC supply)
- **Isolation:** Over-voltage cat. III
- **Impulse voltage:**  
(1,2 / 50  $\mu$ S) IEC 60664  
2,5 kV (115 VAC supply)  
4 kV (230 VAC supply)
- **Consumption (max.):**  
6 VA (AC supply) - 5 W (DC supply)
- **Measured residual current:**  
0 to 30 A (15 / 400 Hz) via external toroid with ratio 600 : 1 or 1000 : 1 connected to terminals 4 and 5)
- **Sensitivity  $I_{\Delta n}$ :**  
30, 100, 300, 500 mA, 1, 3, 5, 10, 30 A (adjustable)
- **Tripping accuracy:** 80 - 90 % de  $I_{\Delta n}$
- **Reset value:**  $\approx$  85 % of trip threshold
- **Time delay  $I_{\Delta s}$ :** 0\*, 60, 150, 300, 500, 800 ms, 1, 4, 10 s (adjustable) \*time set for "0" or "Instantaneous" < 25 ms for residual current @ 5 x  $I_{\Delta n}$ .
- **Reset time:**  
< 2 s (after eliminating the auxiliary power supply)
- **Indication des Leds:**  
- Power supply present: green  
- Bargraph:  
3 x green (30, 50 and 70% of the threshold value set)  
- Tripping: red
- **Operating temperature:** -20 to +55 °C
- **Storage temperature:** -30 to +70 °C
- **Relative humidity:** +95 %

#### Outputs

- Number of contacts: 1 changeover contact relay + 1 single contact relay
- Type of contact: Alarm 1 (8, 9, 10)  
AC1 (250 V) 8 A (2000 VA)  
AC15 (250 V) 2,5 A  
DC1 (25 V) 8 A (200 W)  
Alarm 2 / Pre-alarm (11, 12)  
AC1 (250 V) 6 A (1500 VA)  
AC15 (250 V) 4 A  
DC1 (25 V) 6 A (150 W)
- Lifetime: 150.000 operations at nominal load
- Dielectric voltage: 2 kV AC (rms) IEC 60947-1
- Impulse voltage: 4 kV (1,2 / 50  $\mu$ S) IEC 60664

- **Remote Test and Reset (1, 2, 3) :**  
With N.O. contact (e.g. push-button) Min. contact closure time:  $\geq$  80 ms
- **Box:** black, self-extinguishable, NORYL UL94 VO (front panel and clip in ABS)
- **Weight:** 120 g (DC auxiliary power supply) / 200 g (AC auxiliary power supply)
- **Installation:** encastré, cut-out 45 x 45 mm
- **Connecting terminal:**  $\leq$  2,5 mm<sup>2</sup> flexible
- **Certification:**  
conforms to IEC 60755, 60947, 61000-4-2, 61000-4-3, 61000-4-4, 61000-4-5, 61000-4-6, 61000-4-12, 61000-4-16, 61543.  
CE compliant.

#### > References:

Auxiliary power supply	Reference
12-125 VDC	4942 <b>3602</b>
115 VAC	4942 <b>3711</b>
230 VAC	4942 <b>3723</b>

#### > Accessories

Toroids (C.T.):	
$\Delta$ IC - $\varnothing$ 15 mm	4950 <b>6015</b>
$\Delta$ IC - $\varnothing$ 30 mm	4950 <b>6030</b>
$\Delta$ IC - $\varnothing$ 50 mm	4950 <b>6050</b>
$\Delta$ IC - $\varnothing$ 80 mm	4950 <b>6080</b>
$\Delta$ IC - $\varnothing$ 120 mm	4950 <b>6120</b>
$\Delta$ IC - $\varnothing$ 200 mm	4950 <b>6200</b>
$\Delta$ IC - $\varnothing$ 300 mm	4950 <b>6300</b>

Use of toroids  $\geq$  120 mm: setting  $I_{\Delta n}$  min = 300 mA  
Other toroids: consult us

#### CUTOUT

